



Asus X200MA Keyboard Assembly Replacement

In order to get to the inside of the laptop, these steps will help guide you through removing the keyboard assembly.

Written By: Vanessa Garcia





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Panel



- Remove the following six screws:
 - Six 4 mm Phillips #0 using a phillips screddriver
 - Remove the following one screw:
 - One 14 mm Phillips #0 using a phillips screwdriver
- ☑ The 14mm screw goes in the center.

Step 2



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 03:20:33 PM.